



4747 S. Emporia Street • Wichita, KS 67216
877-737-8795 • 316-303-1022 • Fax 316-303-1104

CybertronPC Dismantle Procedure

This procedure is for the proper handling of returned or end of life product.

Disassemble

- 1) Disassemble system into main components, i.e. motherboard, memory, power supply, case, etc.
- 2) Place all batteries into battery collection area for recycling with Call2Recycle.
- 3) Return all components to inventory control for evaluation.

Evaluation:

- 1) Evaluate functionally, warranty and value of components.
- 2) Functioning components will be sent to product management team for resell.
- 3) Non-functional components with warranty will be sent to manufacturer for exchange.
- 4) Non-functional components that are out of warranty will be collected for recycle with our certified recycling partners such as AER Worldwide.

For systems not being sent back to CybertronPC for recycling, instructions are included in our

packaging that provide the above instructions and directions to contact our battery recycling partner Call 2 Recycle at <http://www.call2recycle.org/> for drop off locations.

*Batteries noted below are materials that require special handling:

System Battery Locations:

- Standard Desktop CMOSK Battery located on the System Motherboard
 - Performance Desktop CMOSK Battery located on the System Motherboard
 - Workstation CMOSK Battery located on the System Motherboard
 - Notebook – CMOSK Battery located on the System Motherboard and Rechargeable Battery located in the External Battery compartment
-